CT ViewArranger

(version 1.0.4)



User Manual

Revision 2019/08/22

©2018-2019 Łukasz Kłonica

TABLE OF CONTENTS	
ABOUT CT VIEWARRANGER	3
HOW TO USE IT	3
INSTALLATION	3
UNINSTALL	3
HOW TO ACTIVATE THE ADD-IN	3
AVAILABLE COMMANDS/BUTTONS	5
ALIGN	5
DISTRIBUTE	5
POSITION	5
LABEL	6
NAME	6
LAYOUT	7
MOVE	7
STEP	7
SETTINGS	7
HELP	8
REACTIVATION OF THE ADD-IN	9

ABOUT CT VIEWARRANGER

Software is an add-in for *Autodesk® Inventor®* that provides several additional commands to manage views, labels, notes and dimensions on the drawing.

HOW TO USE IT

Select the appropriate element or elements and then select the command from the ribbon. In the settings you can choose the tab where all buttons will be placed, values for individual steps, which commands will be displayed on the ribbon.

INSTALLATION

Double-clicking the installation file will start the program. *Windows*® will consider this a breach of security and will ask if you trust the software provider. If you want to use this extension, you will have to answer yes.

UNINSTALL

The uninstall procedure is the same as for other programs in *Windows®*. It depends on the version of operating system . However in most cases it's service "Programs and Features" in Control Panel.

HOW TO ACTIVATE THE ADD-IN

After installing the add-in, *Inventor®* should be re-opened. During opening *Inventor®* will ask if add-in should be block or not. Always there is possibility to block or unblock add-in manually. To do this simply go to the *Add-in Manager* in *Tools* Tab and check or uncheck *Load Behavior*.



Access to Add-In Manager

When add-in is active there should be a few extra buttons in the Ribbon. Default placement is *Place View* tab, however it can be moved to *CT Tools* in the settings of the extension.



Add-In Manager 2018	X
Applications Translators	
Available Add-Ins	Load Behavior
Additive Manufacturing	Automatic / Parts
Anark 3D PDF Publishing	Automatic / Parts
Assembly Bonus Tools	Automatic / Assemblies
Auto Limits	
BIM Content	Automatic / Parts
BIM Simplify	Automatic / Parts
Configurator 360	Automatic / Parts
Content Center	Automatic / Loaded
CT DrawingMaker	Automatic / Loaded
CT DrawingMakerEx	Automatic / Loaded
CT FileOperations	Automatic / Loaded
CT PartCloner	Automatic / Loaded
CT ViewArranger	Automatic / Loaded
Design Accelerator	Automatic / Parts
Drag & Drop Interoperability	Automatic / Parts
DrawingTools	Automatic / Unloaded
Eco Materials Adviser	Automatic / Loaded
EntitlementAPIAddInCS	Automatic / Loaded
ESKD Support	•
Description	Load Behavior
Add-in for Autodesk® Inventor®	
that provides several additional	
commands to manage views on the	Load Automatically
Publisher	Block
Unknown	
Signature	
No signature was present in the file.	
	~
Location	
C:\Users\ \AppData\Roaming\Autode \CT_ViewArranger\CT_ViewArranger.dll	sk\ApplicationPlugins
?	OK Cancel

AVAILABLE COMMANDS/BUTTONS

The commands can be used for both single and multiple selection.

ALIGN					
	₽			₽	<u>0a</u>
Left	Center	Right	Тор	Middle	Bottom
1. Select elements	you want to alig	n.			
2. On the Ribbon s	elect the option	you want.			
All elements will	be aligned to t	the first selecte	ed.		
DISTRIBUTE					
		Horizontal	Vertical		
1. Select elements	you want to dist	ribute.			
2. On the Ribbon s	elect the option I	Horizontal or Ver	tical.		
If they overlap or v placed next to each the extreme eleme	vidth of all is gre n other at the dis nts.	ater than distanc tance of the sele	e between extr ected step. If no	eme elements, t t, they will be ar	hen they will be ranged between
POSITION					

Top Left	Top Center	Top Right	Middle Left	Middle Center
Middle Right	Bottom Left	Bottom Center	Bottom Right	

- 1. Select elements you want to set in the position.
- 2. On the Ribbon select the position you want.

The first selected element will be positioned. If more than one will be selected, all will be moved keeping the distance correlations.

LABEL						
	_					
Top Left	Top Center	Top Right	Bottom Left	Bottom Center	Bottom Right	Hide
1. Select view	or views.					
2. On the Rib	bon select the o	ption you want				
If the label is label as invisil	invisible, the fu	nction will char	nge to visible ar	nd set in right pla	ace. Hide comm	and sets

1. Select view or views.	On Sł	neet In	Document	
2. On the Ribbon select po	osition of label.			
3. Select one of the button	ns above.			
On Sheet: sets all labels o	n one sheet.			
In Document: sets all labe	els in whole docum	ents.		
NAME				
		■∎		
	Selected View	On Sheet	t In Documen	t

1. Select element or elements.

2. On the Ribbon select the direction you want.

Command names the drawing view according to the view cube. If the view is ISO 3D or a Flat Pattern there is possibility to add text before/after the default generated name or even replace it with a custom name.

Ribbon	Steps	Name	
Letter Case:	Default	Included Views >	> 🛛 Auxiliary View
ISO Views:	Default	▼ 3D View	Detail View
Flat Pattern Views:	Default	▼ Flat Pattern	View

In addition, some view types may or may not be included in the naming process.

LAYOUT			

Left to Right Right to Left Top to Bottom

Bottom to Top

1. Select elements.

2. On the Ribbon select the option you want.

Distances between elements are based on the largest element and selected step. If the sheet is too small, the function will not correct it.

MOVE					
	⇒	+	t	ŧ	
	To Right	To Left	Up	Down	

1. Select element or elements.

2. On the Ribbon select the direction you want.

The element or elements will be moved in the appropriate direction by the value of the selected step.

STEP

The step is the general value used for all commands. You can choose from 1 to 5. Determines in:

Distribute: Offset between elements.

Position: Offset between edges of the sheet and element.

Label: Vertical offset between Label and the edge of view.

Layout: Offset between the elements.

Move: Displacement step.

SETTINGS

Opens the settings form, where you can select the tab where all buttons will be placed, values for individual steps, which commands will be displayed on the ribbon or replaced Name for ISO View/Flat Pattern. After changing the target tab, elements of Ribbon or values of Steps you must restart Inventor® or reload the Add-in.

.: \	/iewArra	nger Settings				×
Lo	cation of	the buttons:				
Pla	ace Views	Tab				•
	R	tibbon		Steps		Name
	V	Align	V	Distribute	V	Position
		Label	V	[■] Name	V	Layout
-No The	otes: e checked	command will be vi	sible on t	he Ribbon. Unchecke	d will be	e hidden.
	Default					 <u>H</u> elp ▼

HELP

Additional menu is situated in the right bottom corner of the settings form and it is dropdown menu.

- Opens the activation form
- Opens information about add-in
- ? Opens user manual file

[Steps] Value from 0.0 to 10.0 with increment 0.1	•	Activation About
Default	?	User manual
	Help	• •

REACTIVATION OF THE ADD-IN

When the subscription expires, you can restore it in the activation form. There are two methods:

Activation	
Choose Activa	ation Method:
Online	Online activation requires an internet connection and a purchased subscription in the Autodesk App Store. You mustlog in to your Autodesk account(inside Inventor) before using this option.
🔘 Manual	Manual activation requires pasting a code, which you can get from: support@commonteq.com. Paste your codein the box below.
1	Activate! Close

Online activation is recommended

Online - requires an internet connection and user must be logged in to Autodesk account.



When the user is logged in, just click the activation button. If the subscription is purchased, the activation will proceed automatically.

Manual - it is an alternative method that requires a special key. Paste the key into the text window and press the activation button. This method does not need internet access.